



OVER



TentCraft.com/tent-accessories/counters













Unpack countertops and hardware from the accessory bag. Prepare the counters for installation by removing the legs from the bracket.

Press the push button in and slide the counter leg into the metal bracket on the side of the counter with the clamp until it snaps into place. **REPEAT** for the second counter leg.

Locate the black plastic clamps at each end of the counter. Ensure they're open wide enough to fit around the tent leg. Each clamp includes black washers (circled in red):

- Use two washers for a MONARCHTENT
- Use one washer for a mightyTENT

• Use no washers for a logotent **Note:** The thicker washer is threaded and must be unscrewed to remove.

To attach the counter to the tent leg: Position the fixed arm flush against the leg, then tighten the plastic knob clockwise until secure. **Repeat on the other side.** 

Attach the counters to each other bysliding the third leg into the bracket in thecenter of the counters. And click the pushbutton to secure the center leg in place.

Close the latch next to the center leg to lock the counter into place.